


# TIF01 kit—2020 Toyota 79 series Instructions

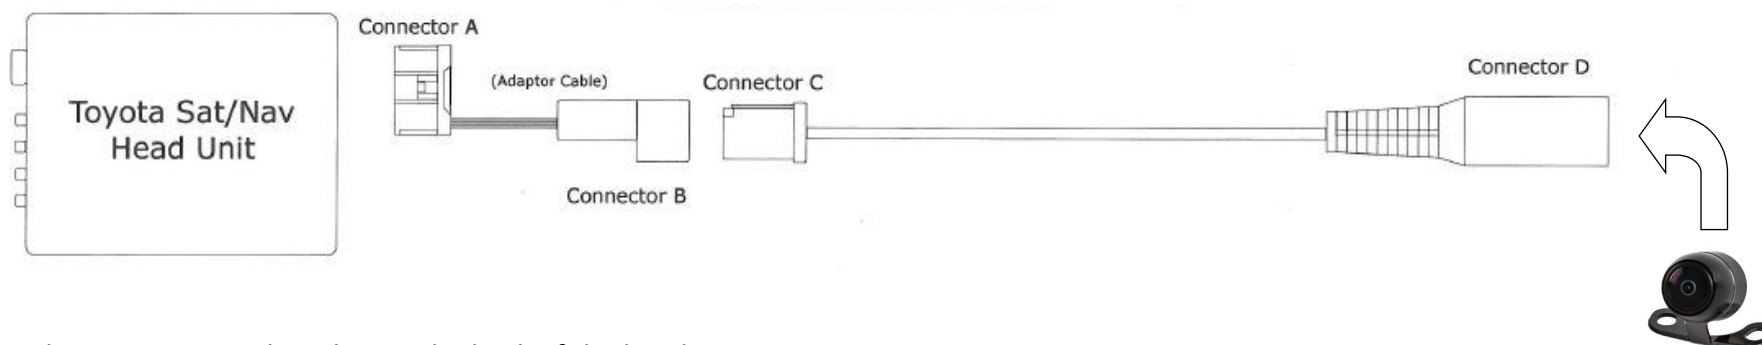

1. Plug connector A directly into the back of the head unit
2. Plug connector B & C together
3. Plug Polaris miniature camera into connector D
4. Locate the 28 pin plug in the head unit (See Figure A)
5. There is a **GREEN** wire from this pin that runs to a coil of black tubing. You should see a clip on the end of the **GREEN** wiring and this is needs to run to your reverse power.
6. Attach the clip to your reverse power which is a **RED** wire with **BLACK** stripe located in the **DRIVERS SIDE KICK PANEL OR THE STEP PANEL**
7. Put vehicle in reverse to test.



Figure A

**Note: If you do not have the camera plugged in when testing then nothing will happen on the screen**