



Polaris Ford 24.5 model with camera wires - Installation guide

Safety Dave AHD Camera & WOZA Kit

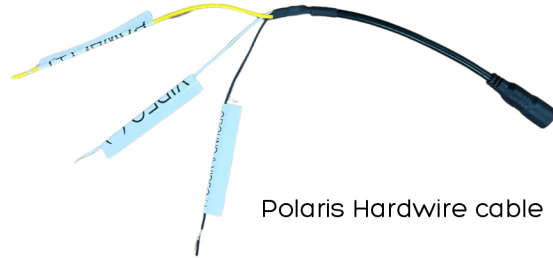

Camera wires are located underneath glove box

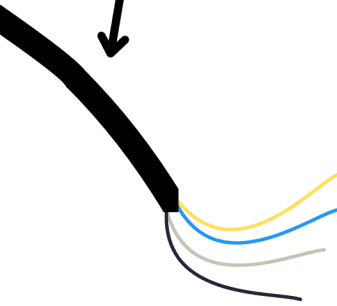

Polaris Hardwire cable



AHD to CVBS module



7m Extension



car WOZA cable



curly cord



SD to WOZA adaptor

Ford wires

YELLOW: POWER (+)

BLUE WITH ORANGE: AUX_CAMERA VIDEO (-)

WHITE WITH PURPLE: AUX_CAMERA VIDEO (+)

BLACK WITH YELLOW: GROUND (-)

Polaris wires

YELLOW: POWER (+)

BLACK: GROUND & VIDEO (-)

WHITE: VIDEO (+)

BLACK: GROUND & VIDEO (-)

1. Connect the Yellow power (+) wires together.
2. Connect the White video (+) wires together.
3. Twist the Blue and Black (-) wires from the Ford side together, and then connect them with the Polaris Black ground and video (-) wire.
4. Install all the cables
5. Once installed you can access your caravan camera via an icon on the screen:

